

# Standheizung freischalten bei 4 Zonen Klima

Beitrag von „kaschtler1a“ vom 6. Januar 2012 um 18:10

## [Zitat von lesnis](#)


Muss mich jetzt hier mal einschalten und zusammenfassen: Wenn ich eine 4 - Zonenklima habe, kann jemand, der sich auskennt, die Standheizung, die sich auch noch programmieren läßt??!!

Viele Grüße aus Halle/Saale

Steffen

Ich weiß nicht ganz genau, was Du nun sagen wolltest, aber wenn Du jemanden hast, der VCDS hat, kann man nach den Angaben im Link die Standheizung aktivieren.

Du hast dann im RNS 850 unter dem Menue Klima den Button "Standheizung, worunter Du dann 3 verschiedene Zeiten programmieren kannst. Des weiteren hast Du die Option Sofortheizen.

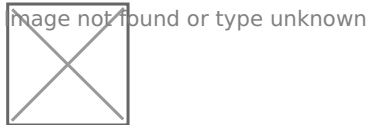

From factory this heater is used only after engine start, but its easy to make it work as a parking heater and activate timers menu in RNS.

- 1 In Hidden menu check option car/cardevicelist - Auxiliary Heater
- 2 set option Auxiliary Heater to 5 in car / carmenuoperation
- 3 set enabled bit 4 in byte 1 of 08-AutoHVAC module.

Then turn off the ignition and start once again. A menu Aux Heater should appear in Climate screen of RNS. There you could setup a day, time and duration of heating. at fixed time you should see ventilation start, and even some smoke under the car

Nachricht #39 unter folgendem Link: [http://www.mytreg.com/index.php?/top...ks/page\\_st\\_20](http://www.mytreg.com/index.php?/top...ks/page_st_20)